



Flexloc Step-by-step Instructions Manual

1. Insert the 2 cables on either side of this piece.

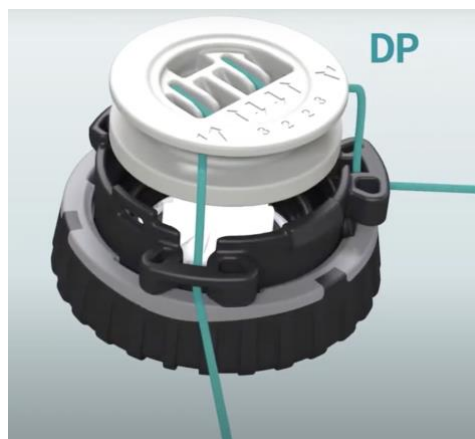

2. Take the tan dial and you should see the numbers and directions written below it. Numbers and directions tell you where the wires will go.

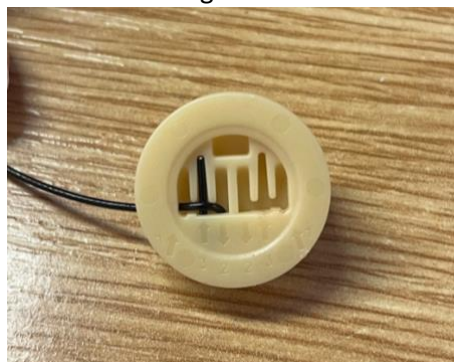


3. Insert the wire in towards 1 and pull the wire up.




4. Insert the wire down towards 2 and pull it down without tightening it.



5. Insert the wire up towards 3 and push it to the end.

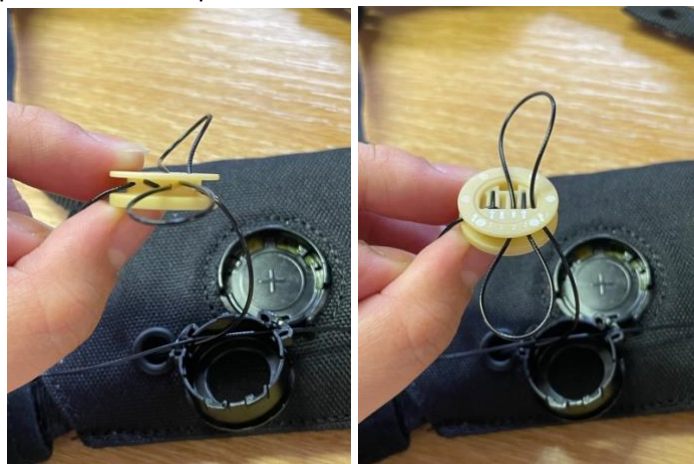


6. Pull the wire up at 2 until it is tight and flush at the bottom.

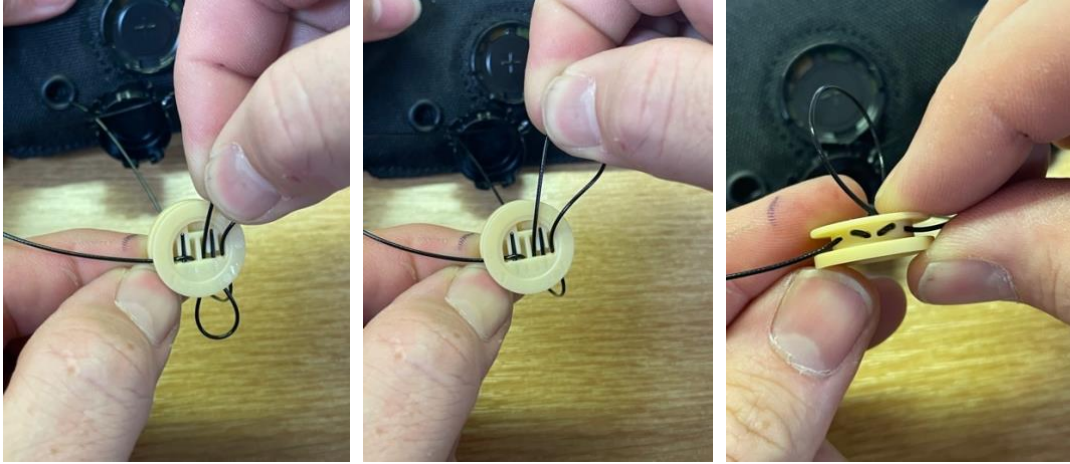

7. Pull the wire down at 1 until it is tight. This should keep the wire locked and secured. Repeat steps 3-7 for the other side of the cable.



8. Put the tan dial in place just like the photos below.

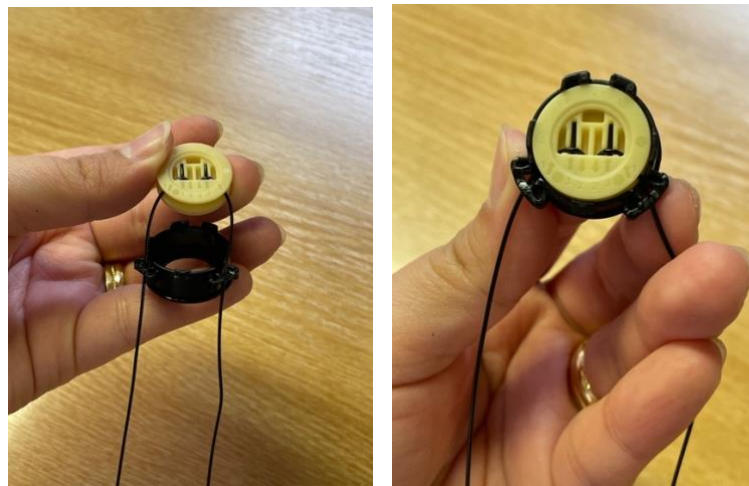

9. Take this piece and make sure you can see the “TOP” written at the bottom.



10. Align it to the right position and push it down to lock them in place.



11. Flip the dial, get it into the right position and press it down until you hear a click to lock it.
See photos below.



12. Take the cover and press it down to lock it.





NOTE:

- Tighten by turning the dial clockwise.
- Loosen by pulling the dial up and pulling the wires away from the dial.
- Press it down after loosening to lock it in place.